

Installation Instructions

Attached is the standard tested driver installation package for our pole displays.

NOTE: This driver supports Windows 98, 2000 and XP only! - There is no driver available for Windows 7.

- 1) Unzip FTDI Driver----.zip into a folder of your choice and follow FTDI Driver 38457-01 instructions to install the driver.
 - With this driver. the allocated COM port is shown in Device Manager and can be changed.

- 2) Unzip OPOS Driver----.zip into a folder of your choice and follow OPOS Driver V5.50 instructions to install the driver.