




APPLICATION		REVISIONS			
NEXT ASSY	USED ON	REV	DESCRIPTION	DATE	APPROVED
		A	PRODUCTION RELEASE/SEE E.O. 33431	12-16-97	L.D.HATCH
		B	SEE E.O. 34672	9-30-99	L.D.HATCH
		C	SEE E.O. 35345	<i>sls</i> 9-20-01	<i>LDH</i>

MANUAL

SHEET 0 - THIS SHEET
 SHEET 1 - FEATURES
 SHEET 2 - GENERAL SPECIFICATIONS
 SHEET 3 - EXPLODED ASSY VIEW & PARTS REFERENCE
 SHEET 4 - ASSY INSTRUCTIONS
 SHEET 5 - CASH DRAWER MOUNTING CONFIGURATIONS
 SHEET 6 - OPERATION
 SHEET 7 - CHARACTER FONTS
 SHEET 8 - CHARACTER FONTS
 SHEET 9 - KIT NUMBERING SCHEME



REV STATUS OF SHEETS	REV	C	C	B	B	B	B	B	B	B	C							
	SHEET	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCE ARE : FRACTIONS DECIMALS ANGLES ± .xxx± ± DO NOT SCALE DRAWING	CONTRACT NO.		 INDUSTRIAL ELECTRONIC ENGINEERS, INC. VAN NUYS, CALIFORNIA	TITLE															
	APPROVALS	DATE		MANUAL, PDK-0002-0XXXXX INSTALLATION & OPERATING INSTRUCTIONS															
	DRAWN ISIS WOLFE	12-12-97		SIZE CAGE CODE DWG NO. REV A 05464 PDK-0002-INOPML C															
TREATMENT	CHECKED D.SUMMERS	12-16-97	SCALE - PROJ NO. 468 SHEET 0 OF 9																
FINISH	ISSUED L.D.HATCH	12-16-97																	





DISPLAYS
KEYBOARDS
INTEGRATED PANELS

INDUSTRIAL ELECTRONIC ENGINEERS, INC. 7740 Lemona Ave., Van Nuys, CA 91409-9234, U.S.A. • Tel 818-787-0311

PDK-0002-0XXXXX* VF POS Pole Display Kit

INSTALLATION and OPERATING INSTRUCTIONS

Key Features:

- Vacuum Fluorescent (VF) display - 2 line x 20 character 11mm 5x7 dot matrix - with contrast enhancing filter, EIA-232 interface, detachable DB-9F host interface/power supply cable and 24Vdc wall mount power supply.
- IEE's extensive command and control set.
- Eight selectable character fonts, block cursor, dimming control and selective blinking.
- Display module housed in an impact resistant enclosure with four-position tilt-recline and 330° swivel adjustment. Pole and mounting base kit are included.
- Display certified to the requirements of UL, CE, TUV and FCC Part 15, Class A.

(* Refer to Page 9 for exact configuration of your kit).

Table of Contents:

Page 2 provides General Specifications and an introduction to the Assembly and Installation of the pole display.

Page 3 provides an exploded view of your pole display assembly with part numbers, so you can identify and verify that you have all the parts ordered.

Pages 4 and 5 provide instructions for assembling the display and attaching it using one of many mounting configurations

Pages 6, 7 and 8 provide information on how to operate the display including provisions for self-test, software commands, character fonts and User Defined Character (UDC) loading.

Page 9 provides the kit numbering scheme that defines the exact contents as referenced by the number on the lid of the shipping box. **PDK-0002-0XX** defines the characteristics of the display head (i. e. display type, software functionality, pole position, housing color and filter color) and cannot be revised.

PRODUCT SUPPORT

For information not found in these Instructions, please contact IEE's Sales Application Engineering Department:

Industrial Electronic Engineers, Inc.
7740 Lemona Avenue
Van Nuys, California 91409-9234 USA

Phone: (800) 422-0867 or (818) 787-0311
Fax: (818) 901-9046
E-mail: mail@ieeinc.com


PDK-0002-INOPML
September 17, 2001

GENERAL SPECIFICATIONS

Interface:

• Power:	Supply voltage	11-29 Vdc	• Pin Assignments:	(Host)	DB-9F
	Supply current @24 Vdc	408 ma (max)			
	Supply risetime	100 milliseconds (max)			
• Caution:	Supply sequencing	Rapid ON/OFF sequencing is not recommended.	COM	1	COM
	Start cycle	The display is not ready to accept data until 1.2 seconds after application of power.	RXD	2	TXD
• Signal:	Serial EIA-232	9600 baud - 8 bits - no parity	TXD	3	RXD
	Serial input levels	+3V to +15V (space/logic 0)	DTR	4	DSR
		-3V to -15V (mark/ logic 1)	SIG GND	5	SIG GND
			DSR	6	DTR
			N.A.	7	N.C.

Data Format

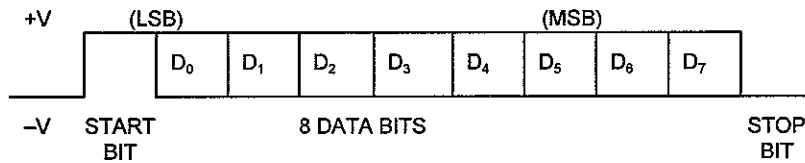

Environmental:

- **Operating Temperature:** 0 to +70 °C (+32 to +158 °F)
- **Storage Temperature:** -20 to +70 °C (-4 to +158 °F)
- **Relative Humidity:** 0 to 95% (non-condensing)

ASSEMBLY and INSTALLATION

Overview

To achieve the greatest mounting and cabling flexibility available in a POS pole display system, this kit provides a cable break a few inches from the pod. The DIN8M on the module pigtail cable connects to the DIN8F on the Host/Power cable assembly after it has been installed and routed through the pole. This allows easy connect and disconnect of the display module.

The DIN8F should be routed through any holes, slots, etc. in the installation and mounting hardscape (organizers, hardware, mounting surfaces, mounting bases or kits) between the Host DB9 and Power Supply connections before it is routed through the pole, from the bottom (threaded end). The independent power supply cable provides additional flexibility in locating the wall mount power supply.

Pages 3, 4 and 5 provide information on the assembly and installation/attachment of the pole display. Details are provided for attaching the pole to a variety of bases, kits, surfaces and organizers.

Installation Instructions:


Perform these electrical installation steps after, or as a part of, the attachment instructions appropriate for the specific mechanical installation

1. Connect the DB-9 (female) to the appropriate port on the host system.
2. Plug the wall mount power supply into an appropriate AC outlet.
3. A blinking cursor should appear in the left-most position on the top line. The POS display is now ready for operation using the commands and codes provided on pages 6, 7 and 8

EXPLODED ASSEMBLY VIEW and PARTS REFERENCE

+

PDK-0002-0XXXXX POS POLE DISPLAY DISTRIBUTOR KIT TYPE 1 POD RS232 INTERFACE

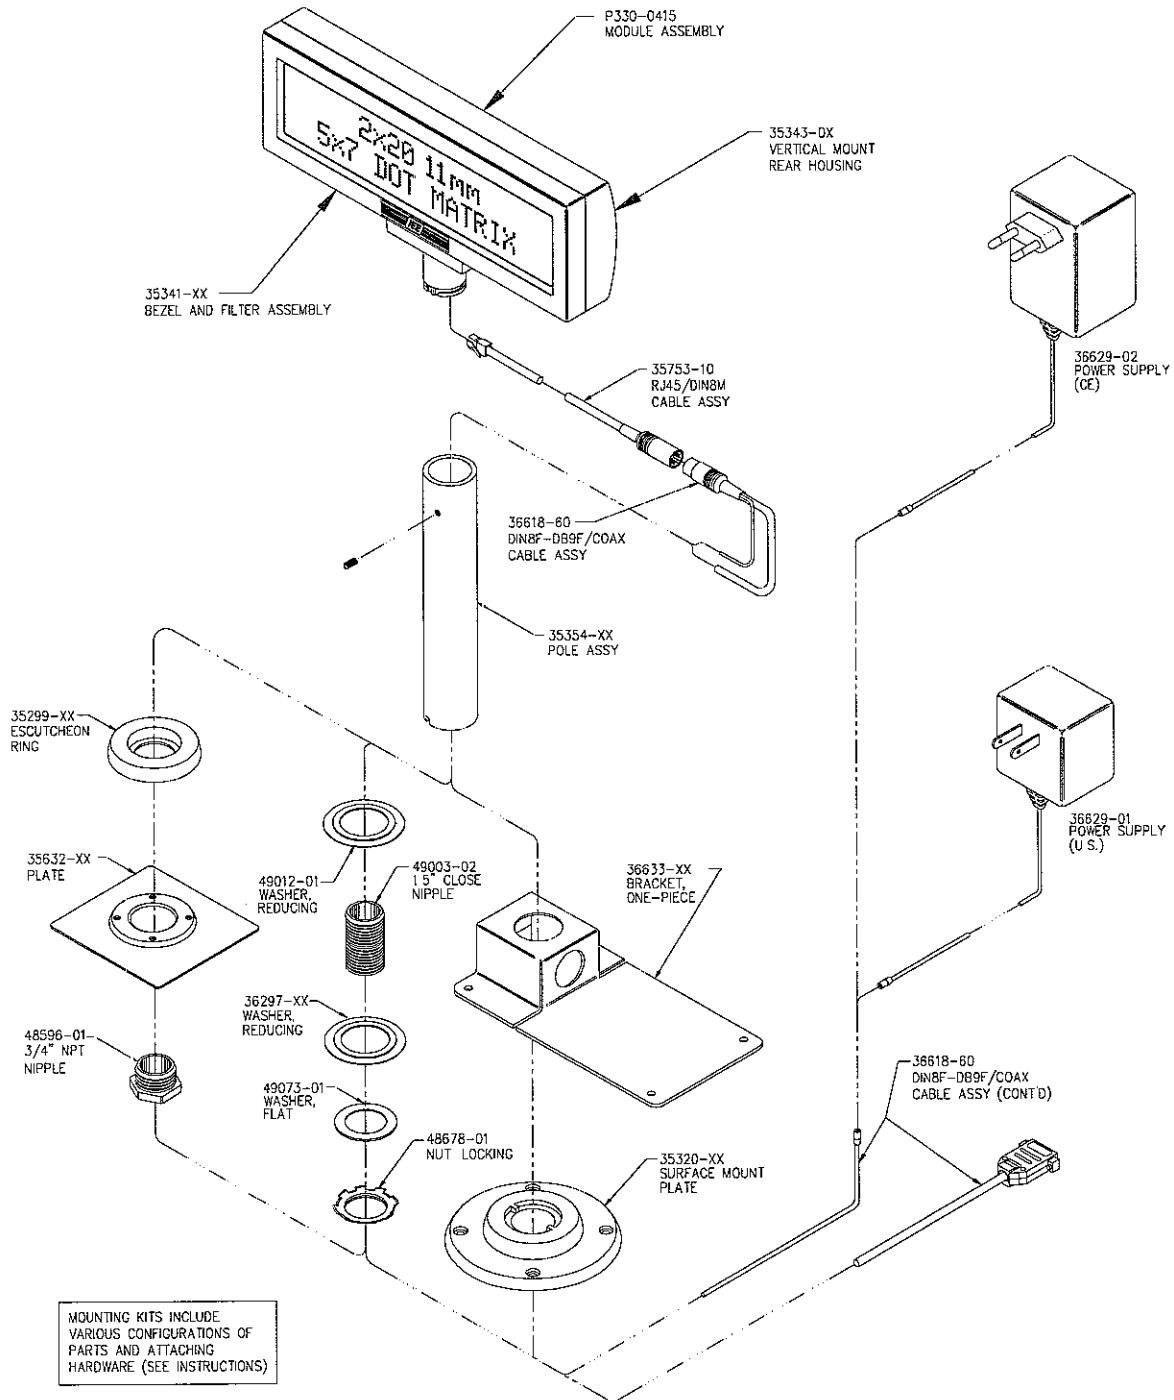

+

ASSEMBLY INSTRUCTIONS

Mounting Kits:

- **35360-0X SURFACE MOUNTING KIT (standard)**

- (1) 35320-XX SURFACE MOUNT PLATE
- (1) 48596-01 CONDUIT NIPPLE

- **35697-0X BASE KIT, HEAVY METAL**

- (1) 35632-XX PLATE, MULTI-PURPOSE
- (1) 35299-XX ESCUTCHEON RING
- (1) 48596-01 CONDUIT NIPPLE

- **36231-0X ICD POLE KIT**

- (1) 36297-XX WASHER, REDUCING
- (1) 49003-02 CLOSE NIPPLE
- (1) 49012-01 WASHER, REDUCING
- (1) 48678-01 LOCKNUT

- **36631-99 APG BRACKET KIT**

- (1) 36630-99 BRACKET, POLE
- (1) 48596-01 CONDUIT NIPPLE
- (2) 48989-02 #8-32 PAN HD. SCREW, LOCKWASHER
- (2) 43311-04 #8-32 NUT, HEX

- **36632-0X MS CASH KIT**

- (1) 36297-XX WASHER, REDUCING
- (1) 49073-01 WASHER, FLAT
- (1) 48596-01 CONDUIT NIPPLE


- **36634-0X MOUNTING KIT, SHEET METAL BASE**

- (1) 36633-XX BASE, SHEET METAL
- (1) 48596-01 CONDUIT NIPPLE
- (4) 48765-10 #8-18 PAN HEAD SCREW, THD FORMING

Surface Mount and Freestanding Configurations:


Mounting Kit, Sheet Metal

Thread the DIN8F connector through a hole in the mounting surface or one of the two side openings in the bracket and then through the conduit nipple. Thread the connector through the bracket top hole and into the threaded end of the pole, continue to feed the cables in until the connector emerges from the pole, and pull out some slack. Holding the conduit nipple in place, screw the pole down snugly onto the bracket. The sheet metal base can be freestanding, mounted with 48765-10 screws or slid under the cash register etc

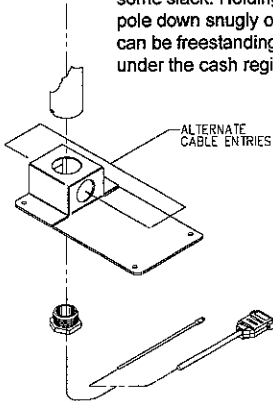


Surface Mount Plate

Thread the DIN8F connector through a hole in the mounting surface and conduit nipple, or breakout one of the tabs in the surface mount plate (use wide, square jaw pliers) and route the cable through the conduit nipple. Thread the cable through the surface mount plate and pole. Holding the pole in the plate, tighten the conduit nipple into the pole. Attach the mounting plate to the surface, being careful to route the cables through the breakout tab if applicable

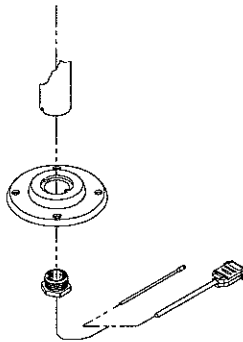

Base Kit, Heavy Metal

Thread the DIN8F connector through a hole in the mounting surface and conduit nipple or just through the conduit nipple. Thread the cable through the base, escutcheon ring and pole. Pull some cable slack through, push the nipple into the recess in the base, put the pole in place in the escutcheon ring and tighten it onto the nipple threads until snug.

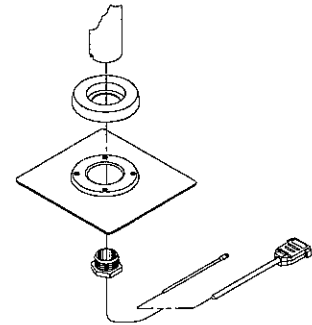


Display Module and Pole Assembly:

The display module is attached to the pole assembly by mating the DIN8 connectors, inserting the display yoke into the pole at the end closest to the set screw, and then rotating the display.

1. Push the cable slack back into the pole.
2. Insert the display module partially into the pole and align the set screw with one of the two notches on the yoke bushing.
3. Push the yoke bushing completely into the pole, then rotate the module on the pole as desired.

TO REMOVE THE MODULE:


Rotate the module in either direction until the set screw touches the stop on the yoke, then pull the module straight out from the pole until the DIN8 connectors are exposed and the module can be disconnected

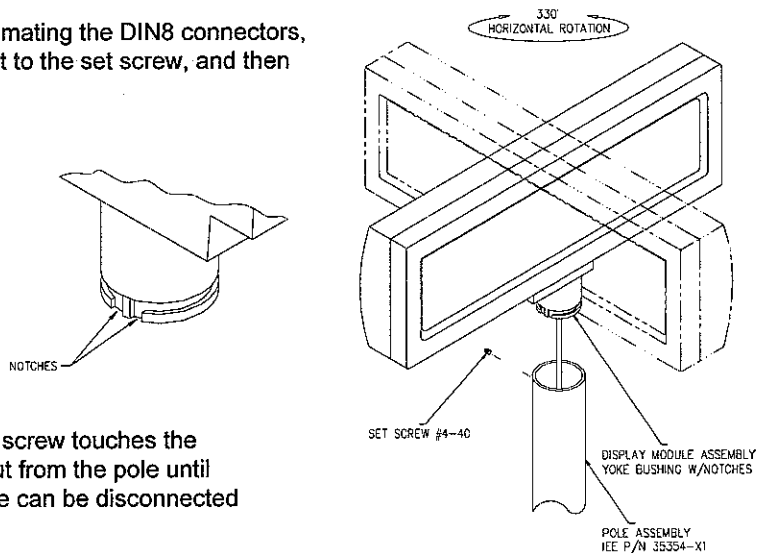

CASH DRAWER MOUNTING CONFIGURATIONS


• APG CASH DRAWER

Thread the DIN8F connector through the conduit nipple, bracket and pole, pulling out some slack. Hold the nipple in place and tighten the pole down onto the bracket. Mount the assembly (through the partner) in the selected position along the row of mounting holes at the rear of the drawer using the hardware as shown

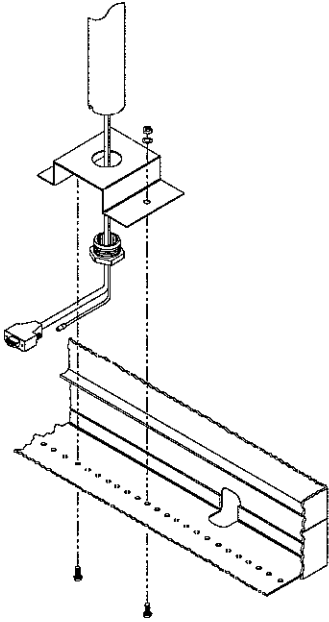


• INDIANA CASH DRAWER

Remove the mounting bracket on the underside of the shoe. Tighten the close nipple into the pole. Thread the DIN8F connector through the locknut, metal washer, shoe, painted washer and pole. Put the pole on the painted washer and tighten it in place with the locknut

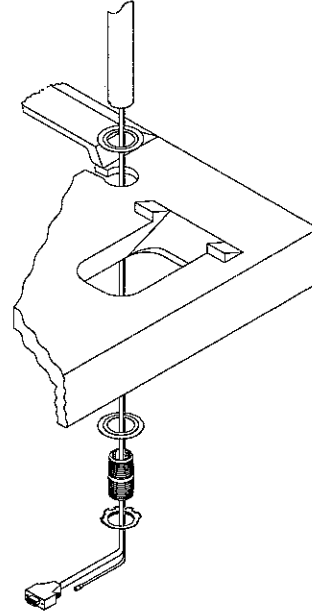


• MMF CASH DRAWER

Loosen the U-clamp nuts on the pole mounting bracket in the POS platform system. Thread the DIN8F connector through the POS platform, eccentric washer and pole. Seat the pole in the bracket to full depth and tighten the U-clamp nuts to secure the assembly in place.

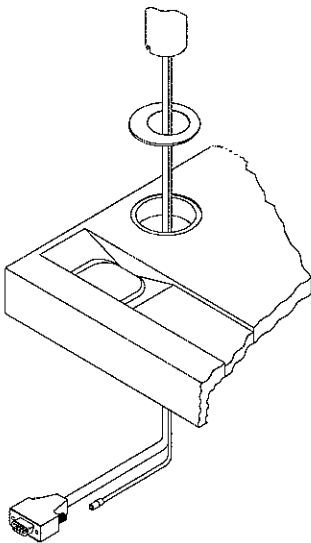

• MS CASH DRAWER

Remove the clamp assembly from the mounting bracket on the underside of the POS deck. Thread the DIN8F connector through conduit nipple, small washer, POS deck, painted washer and pole, pulling out some slack. Slide the small washer under the edges of the spotwelded bracket at the underside surface of the POS deck. Hold the nipple in place through the washer and tighten the pole onto the nipple, over the painted washer, to secure the pole in place

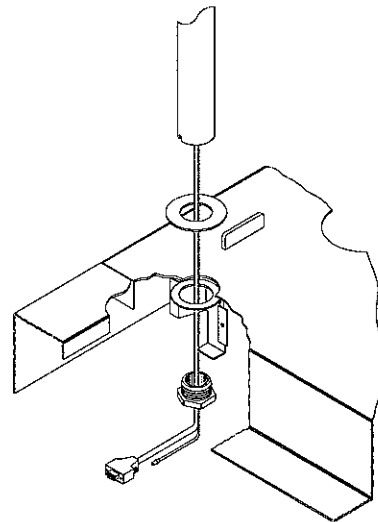

OPERATION

Numeric Order Control Codes:

NOTE: CARE SHOULD BE TAKEN NOT TO SEND UNDEFINED CONTROL OR COMMAND CODES TO THE POS DISPLAY AS THIS MAY CAUSE A MALFUNCTION OF THE MODULE.

01h READ THE CHARACTER CAPACITY OF THE DISPLAY (Display responds sending 28h)
 02h DISPLAY SOFTWARE CHECKSUM AND SOFTWARE NUMBER
 03h READ CURSOR LOCATION VALUE (display responds with one byte) 01-14(h) for line1, 21-34(h) for line2
 04h READ DATA AT CURRENT CURSOR LOCATION
 06h BEGIN BLINK FIELD AT CURRENT CURSOR LOCATION
 07h END BLINK FIELD AT CURRENT CURSOR LOCATION
 08h BACKSPACE CURSOR LOCATION ONE POSITION (except at HOME position)
 09h ADVANCE CURSOR LOCATION ONE POSITION (cursor wraps to HOME from bottom right position)
 0Ah LINE FEED (vertical scroll from bottom line; cursor position does not change)
 0Ch CLEAR THE DISPLAY (cursor does not move)
 0Dh CARRIAGE RETURN (returns cursor to left-most position on the same line)
 0Eh MAKE CURSOR INDICATOR (FLASHING BLOCK) INVISIBLE (cursor counter continues to function)
 0Fh + MAKE CURSOR INDICATOR (FLASHING BLOCK) VISIBLE
 <10h> BOTTOM LINE DATA ENTRY WITH AUTOMATIC CARRIAGE RETURN AND LINE FEED (moves cursor to left-most position on bottom line, when filled a vertical scroll occurs and the cursor is moved back to the left-most position on the bottom line)
 <11h> + NORMAL DATA ENTRY WITH AUTOMATIC CARRIAGE RETURN AND LINE FEED (data enters from current cursor position, when bottom line is filled a vertical scroll occurs and the cursor is re-positioned to the left-most position on the bottom line)
 <12h> OVERWRITE OF RIGHT-MOST CHARACTER ON THE CURRENT LINE (automatic Carriage Return is set to OFF)
 <13h> HORIZONTAL SCROLL MODE (characters move from right to left on bottom line only, after line has been filled)
 14h RESET (sets display to DEFAULT configurations and clears User Defined Character locations)
 15h + DISPLAY CLEAR (moves cursor to left-most position on bottom line in Mode 10h, and HOME in Modes 11h, 12h, 13h and 1Ah)
 16h + CURSOR HOME (returns cursor to upper left most position)
 19h SET BIT SEVEN HIGH FOR NEXT BYTE ONLY
 <1Ah> WRAP AROUND DATA ENTRY (after the bottom right character is entered the cursor is moved to the HOME position)

+ Display automatically defaults to these conditions after Power-up or RESET.
 < > These instructions are mutually exclusive.

1Bh INITIATES FOLLOWING SEQUENCES:
 1B-05-49 IEEE SPECIFIC RESPONSE CODE (the following message is sent to the host without regard for flow control):
 D,2,IEEE,35970.-02(CR) (18 BYTES)
 1B-26-01-M-N DOWNLOAD USER DEFINED CHARACTERS
 M=Byte location to begin download (F8-FF)
 N=Number of characters to be downloaded
 Each character pattern is defined by 5 data bytes
 DELETE DOWNLOADED CHARACTER LOCATION N
 N=F8-FF
 1B-3F-N
 1B-40 TERMINATE SELF TEST (sets display to DEFAULT configurations and clears all USER CHARACTER locations)
 DEFINED
 1B-74-N SELECT CHARACTER SET
 + N=01, ASCII and General European
 N=02, ASCII and Katakana
 N=03, ASCII and Cyrillic
 N=04, ASCII and Hebrew
 N=05, ASCII and ISO 8859-1
 N=06, ASCII and ISO 8859-2
 N=07, ASCII and Greek
 1D-05(h) EPSON SPECIFIC RESPONSE CODE (display sends 05 to host)
 1Fh INITIATES FOLLOWING SEQUENCES:
 1F-24-C-L MOVE CURSOR TO C, Column 01-14(h)
 L, Line 01,02(h)
 1F-40 EXECUTE SELF TEST (use 1B-40 to terminate self test)
 1F-45-T SET ALL DISPLAY BLINK FIELDS TO AN INTERVAL=
 T X 50msec, range of T=00h(OFF)-3Fh, duty cycle=50%
 1F-58-N SET BRIGHTNESS LEVEL, N=% of max brightness:
 + N=04(100%), N=03(60%), N=02(40%), N=01(20%)
 1F-72-N SELECT NORMAL/REVERSE DISPLAY MODE
 + N=00 (Normal), N=01 (Reverse)

User Defined Character Loading:

A maximum of eight characters may be created temporarily (until power-off or reset) by a user-defined downloaded character pattern. To do so, enter the following sequence of commands and data:

BYTE	DESCRIPTION	CHARACTER DOT DATA								CHARACTER MATRIX					
		BYTE #	7	6	5	DATA BIT									
						4	3	2	1	0	1	2	3	4	5
1-3	Start load 1B-26-01 (HEX)	6	29	20	11	2	28	19	10	1	6	7	8	9	10
4	Location to begin download F8-FF (HEX)	7	31	22	13	4	30	21	12	3	11	12	13	14	15
5	Number of characters to download (01-08)	8	33	24	15	6	32	23	14	5	16	17	18	19	20
6-10	*Character dot data	9	35	26	17	8	34	25	16	7	21	22	23	24	25
		10	0	0	0	0	0	27	18	9	26	27	28	29	30
											31	32	33	34	35

* Repeat bytes 6-10 for number of characters to be downloaded

Example: To download a Greek letter Psi into character location F8.

1Bh	BYTE 1, start load	○ ● ● ● ●
26h	BYTE 2, start load	○ ○ ● ○ ○
01h	BYTE 3, start load	● ○ ● ○ ●
F8h	BYTE 4, location to begin download	● ○ ● ○ ●
01h	BYTE 5, download 1 character	○ ● ● ○ ○
78h	BYTE 6, dots 20, 11, 2, 28 ON	○ ○ ● ○ ○
71h	BYTE 7, dots 22, 13, 4, 3, ON	○ ● ● ● ●
Ech	BYTE 8, dots 33, 24, 15, 32, 23 ON	
1Ah	BYTE 9, dots 8, 34, 16 ON	
02h	BYTE 10, dot 18 ON	

CHARACTER FONTS

The **ASCII CHARACTER SET** is located in standard ASCII locations from 20 (HEX) to 7F (HEX)
 The alternate character set is loaded into ASCII locations from 80 (HEX) to F7 (HEX)

ASCII CHARACTER SET - always available from non-volatile memory.

EUROPEAN CHARACTER SET (Default setting) - loaded into RAM* at Power-up or Reset, can be re-loaded with command sequence 1B-74-01 (HEX).

KATAKANA CHARACTER SET - can be loaded into RAM* with command sequence 1B-74-02 (HEX)

CYRILLIC CHARACTER SET - can be loaded into RAM* with command sequence 1B-74-03 (HEX).

HEBREW CHARACTER SET - can be loaded into RAM* with command sequence 1B-74-04 (HEX).

ISO 8859-1 CHARACTER SET - can be loaded into RAM* with command sequence 1B-74-05 (HEX)

ISO 8859-2 CHARACTER SET - can be loaded into RAM* with command sequence 1B-74-06 (HEX)

GREEK CHARACTER SET - can be loaded into RAM* with command sequence 1B-74-07 (HEX)

* Pre-designated alterable character set location

N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F		
N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
10	11	12	13	14	15	16	17	18	19	1A	1B	1C	1D	1E	1F		
20	21	22	23	24	25	26	27	28	29	2A	2B	2C	2D	2E	2F		
30	31	32	33	34	35	36	37	38	39	3A	3B	3C	3D	3E	3F		
40	41	42	43	44	45	46	47	48	49	4A	4B	4C	4D	4E	4F		
50	51	52	53	54	55	56	57	58	59	5A	5B	5C	5D	5E	5F		
60	61	62	63	64	65	66	67	68	69	6A	6B	6C	6D	6E	6F		
70	71	72	73	74	75	76	77	78	79	7A	7B	7C	7D	7E	7F		

STANDARD ASCII CHARACTER SET

80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F		
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F		
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF		
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF		
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF		
D0	D1	D2	D3	D4	D5	D6	D7	D8	DA	DB	DC	DD	DE	DF			
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF		
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF		

GENERAL EUROPEAN CHARACTER SET
(Default Setting)

80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F		
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F		
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF		
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF		
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF		
D0	D1	D2	D3	D4	D5	D6	D7	D8	DA	DB	DC	DD	DE	DF			
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF		
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF		

KATAKANA CHARACTER SET

80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F		
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F		
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF		
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF		
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF		
D0	D1	D2	D3	D4	D5	D6	D7	D8	DA	DB	DC	DD	DE	DF			
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF		
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF		

CYRILLIC CHARACTER SET

CHARACTER FONTS

#	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	
80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F																						
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F																						
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF																						
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF																						
N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF																						
N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	DA	DB	DC	DD	DE	DF																						
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF																						
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF																						

HEBREW CHARACTER SET

#	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	
80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F																						
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F																						
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF																						
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF																						
N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF																						
N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	DA	DB	DC	DD	DE	DF																						
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF																						
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF																						

ISO 8859-1 CHARACTER SET

#	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z		
80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F																							
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F																							
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF																							
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF																							
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF																							
D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	DA	DB	DC	DD	DE	DF																							
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF																							
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF																							

ISO 8859-2 CHARACTER SET

#	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z		
80	81	82	83	84	85	86	87	88	89	8A	8B	8C	8D	8E	8F																							
90	91	92	93	94	95	96	97	98	99	9A	9B	9C	9D	9E	9F																							
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	AA	AB	AC	AD	AE	AF																							
B0	B1	B2	B3	B4	B5	B6	B7	B8	B9	BA	BB	BC	BD	BE	BF																							
C0	C1	C2	C3	C4	C5	C6	C7	C8	C9	CA	CB	CC	CD	CE	CF																							
D0	D1	D2	D3	D4	D5	D6	D7	D8	D9	DA	DB	DC	DD	DE	DF																							
E0	E1	E2	E3	E4	E5	E6	E7	E8	E9	EA	EB	EC	ED	EE	EF																							
F0	F1	F2	F3	F4	F5	F6	F7	F8	F9	FA	FB	FC	FD	FE	FF																							

GREEK CHARACTER SET

KIT NUMBERING SCHEME

PDK-[0002]- 0₁ X₂ X₃ X₄ X₅ X₆

POLE POSITION

0 = CENTER/NO OPTION

HOUSING COLOR

W = WHITE (IEE IVORY GRAY)
B = JET BLACK

FILTER COLOR

A = AMBER
B = BLUE
G = GREEN
N = NEUTRAL GRAY
(DISPLAY APPEARS AQUA)

POLE LENGTH

0 = NOT PROVIDED
B = MINIMUM LENGTH (2 IN.)
S = SHORT (6 IN.)
D = MEDIUM SHORT (10 IN.)
M = MEDIUM (12 IN.)
L = LONG (18 IN.)
X = EXTRA LONG (22 IN.)

MOUNTING KIT

0 = NOT SUPPLIED
1 = MNTG KIT, UNIVERSAL
2 = MNTG KIT, HARD
3 = MNTG KIT, SHEET METAL
4 = BASE KIT, PASS THRU
5 = BASE KIT, HEAVY METAL
6 = SURFACE MOUNT KIT
A = MNTG KIT, APG BRACKET
I = MNTG KIT, ICD POLE
C = MNTG KIT, MS CASH

POWER SUPPLY

0 = NOT SUPPLIED
1 = 115VAC-24VDC/US-COAX (2.1MM)
2 = 230VAC-24VDC/CE-COAX (2.1MM)

NOTE: THE SUB-SET PDK -[0002] -0₁X₂X₃ DEFINES THE DISPLAY ASSEMBLY IN THIS PDK KIT.